


# MITSUBISHI SPACEGEAR

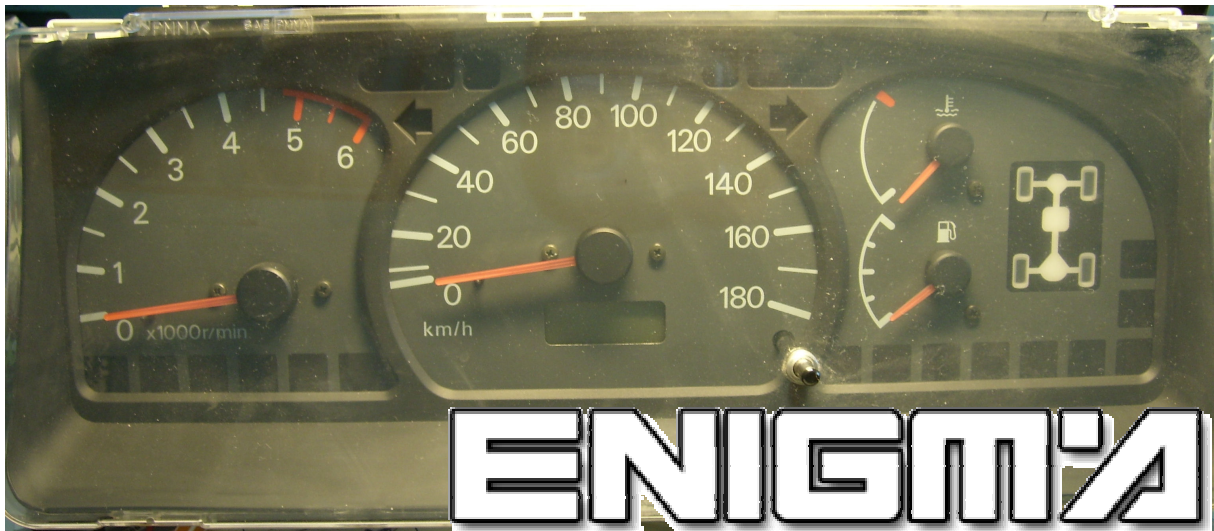

Use **C7** CABLE, REMOVE ONLY SPEDOMETER, IT IS THE SCREEN ONE, THEN WE CAN SEE THE **93C46** EPROM, AND WITH THE PHOTO BELOW WE CAN SOLDER CABLE LEADS ACCORDING TO COLOUR:

