


NISSAN TERRANO2 FROM 2001



USE CABLE C4, REMOVE BACK PLASTIC COVER FROM DASH, CAREFULLY, AND THEN LOCATE EPROM MEMORY, AND CLIP IT CHECKING **PIN 1** AS SHOW US BELOW PHOTO:

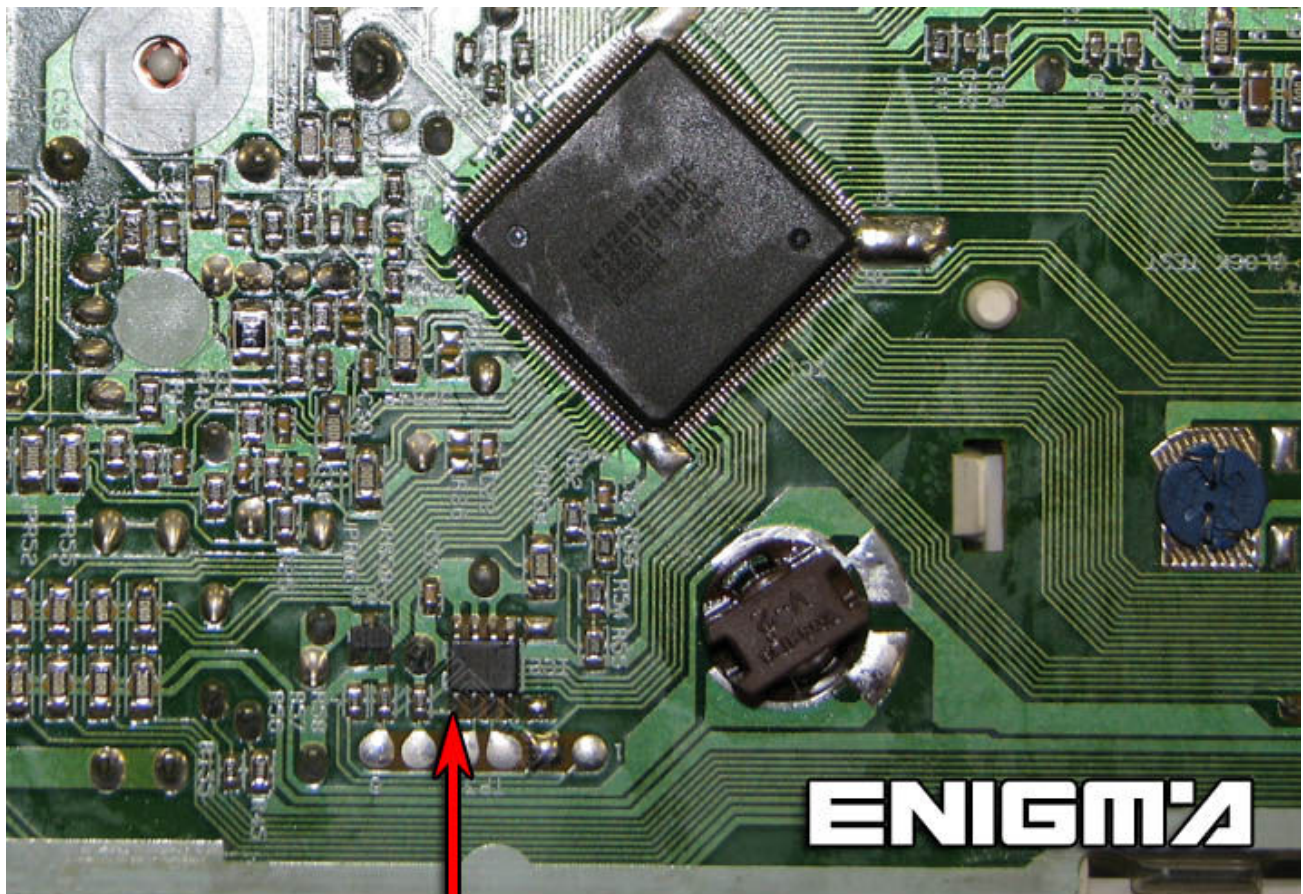

PIN 1