


PEUGEOT 806



USE CABLE C11,
REMOVE BACK
PLASTIC COVER
FROM DASH,
SOLDER CABLE
LEADS ACCORDING
TO COLOURS AS
SHOWN OF BELOW
PHOTOS:

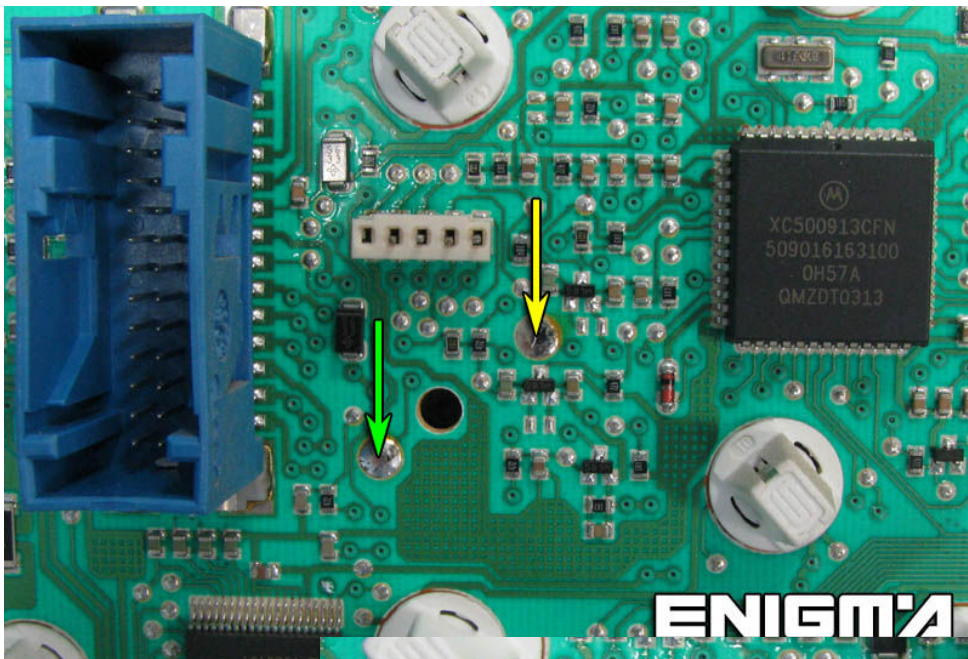