




PEUGEOT PARTNER BSI NEC

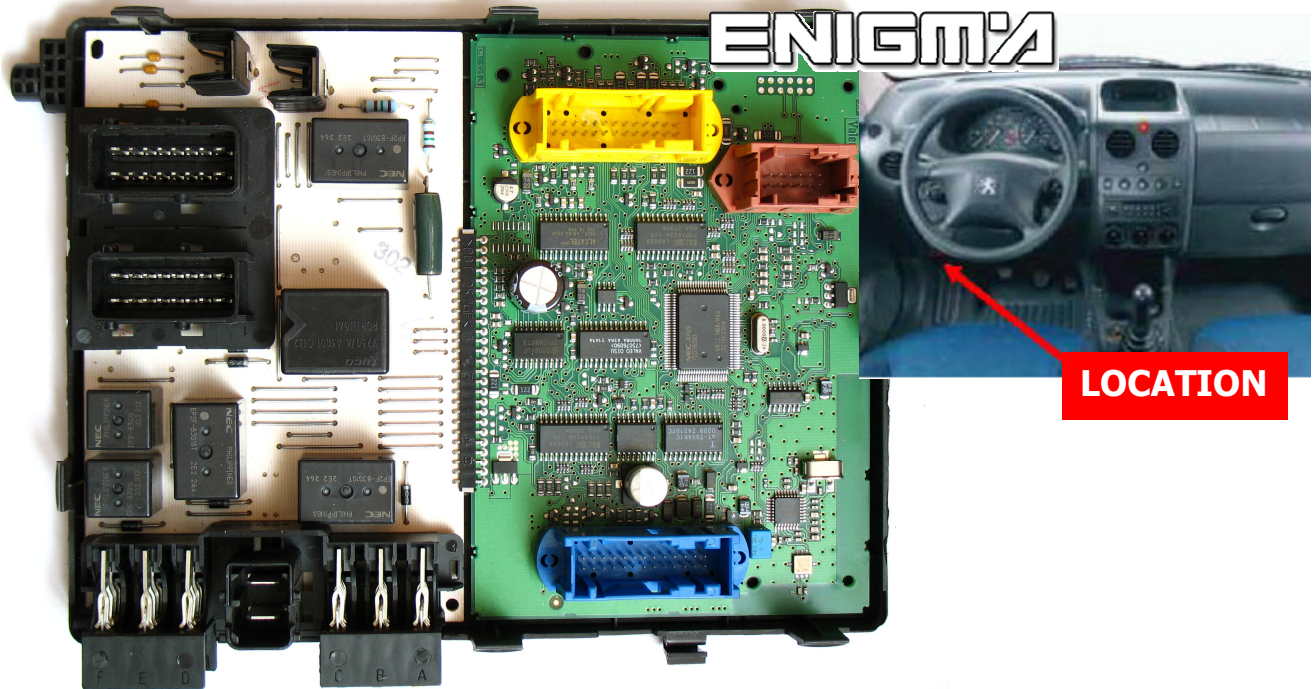

Use **CABLE C13** ALWAYS CONNECTED TO **A1 ADAPTER**. REMOVE BOTH SIDES FROM BSI, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO NUMBER AS SHOWN IN NEXT PHOTOS:

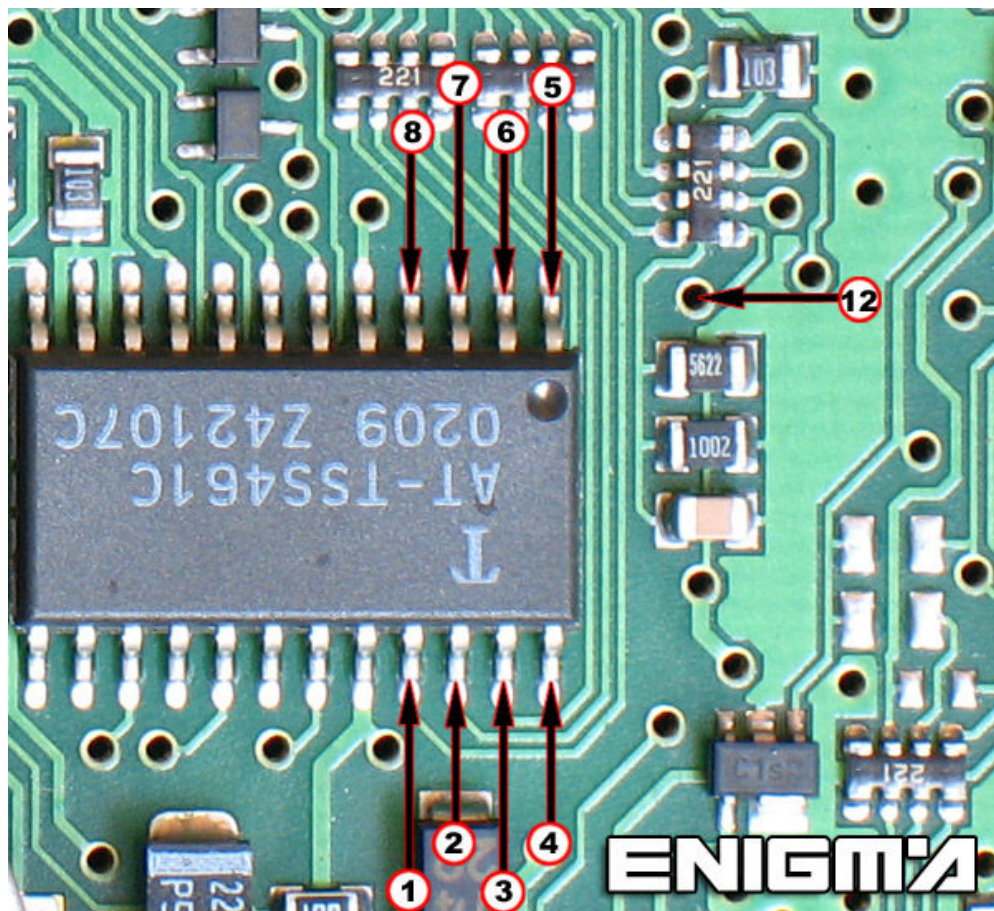

WE MUST **DESOLDER RESISTOR** FROM LEAD 9:

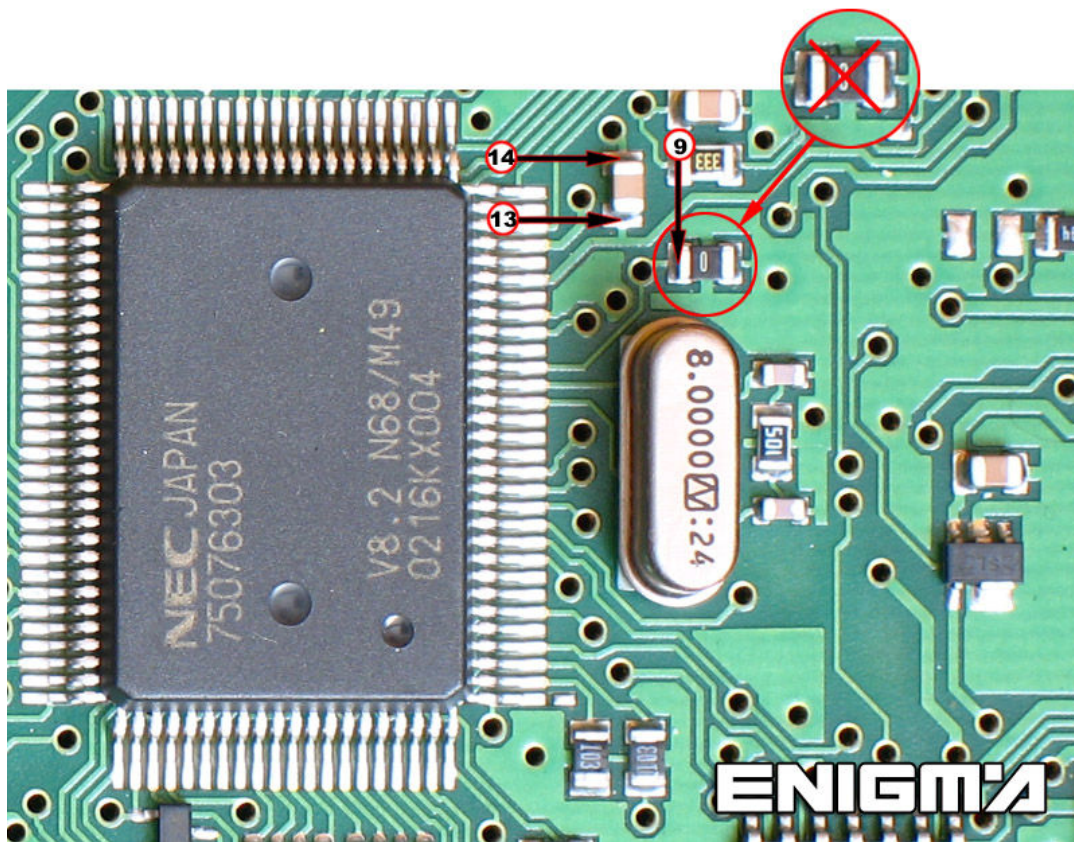

AND **UP** ONE PIN:

