


# PONTIAC VIBE

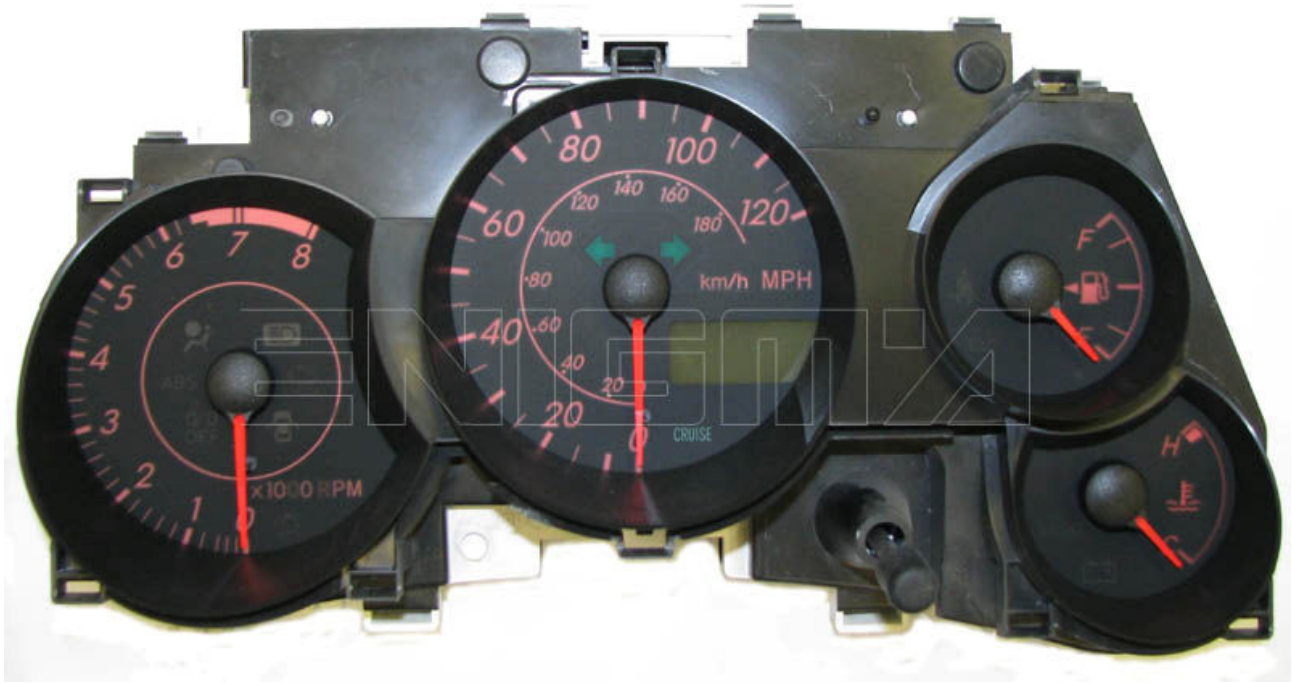

USE CABLE C4, REMOVE BACK PLASTIC COVER OF DASH, THEN LOCATE EPROM MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

