


RENAULT CLIO C46



USE CABLE **C4**, OPEN BACK PART OF DASH, CAREFULLY TO DON'T TAKE OFF NAILS, WE CAN SEE RESULT IN THIS PHOTO:

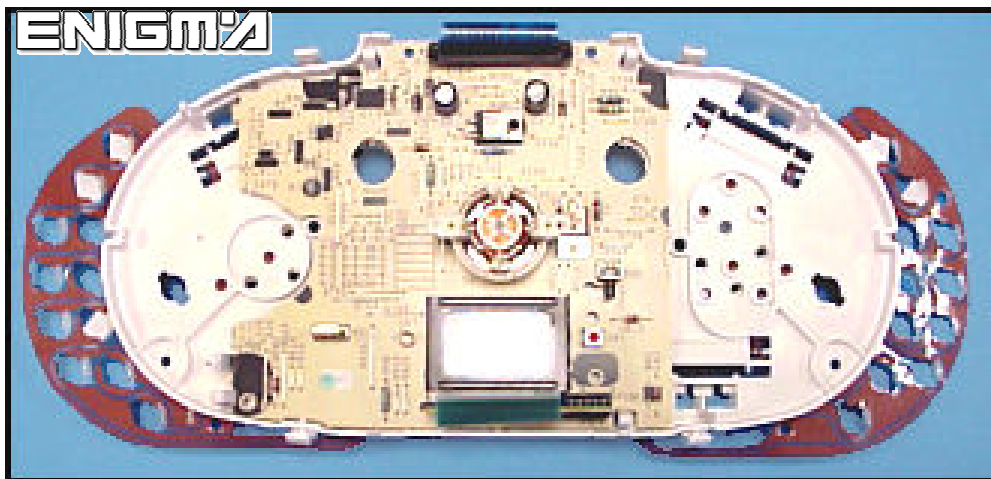

THEN REMOVE MAIN BOARD AND LOCATE EPROM 93C46 MEMORY, CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

