


ROVER 25

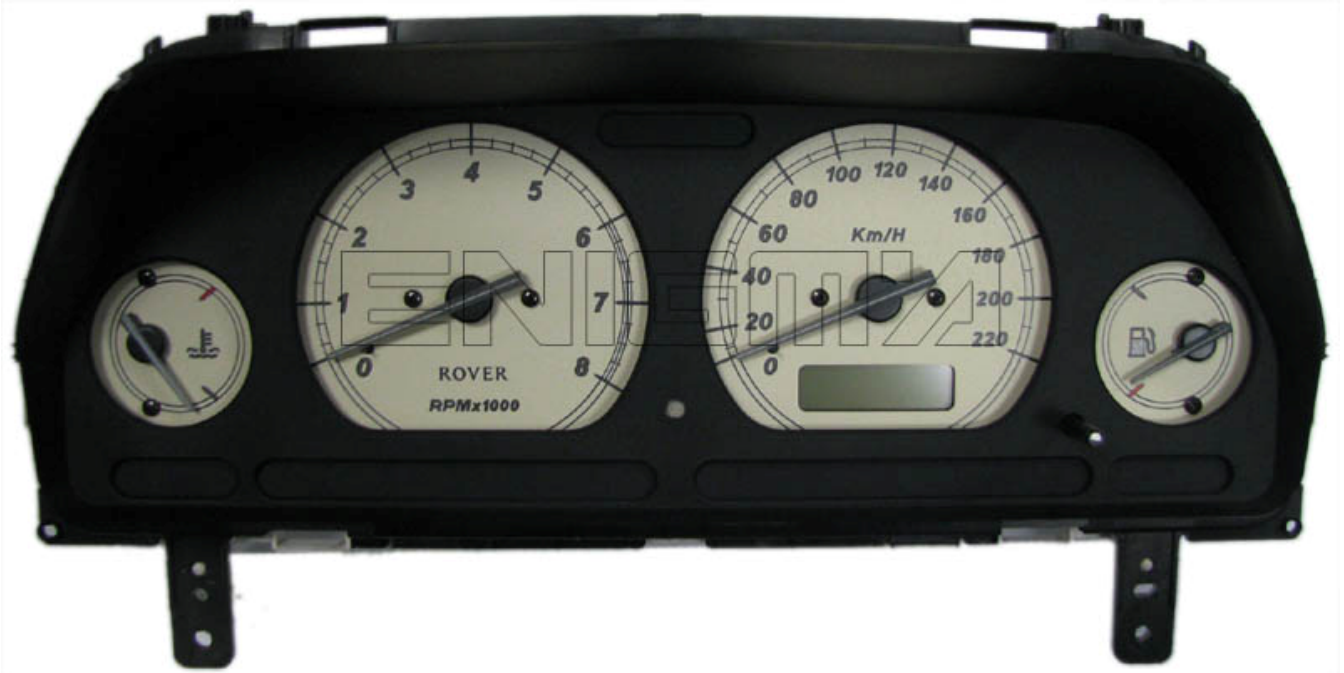

USE CABLE C7, REMOVE FRONT PLASTIC COVER, REMOVE SPEEDOMETER, ONLY FIXING WITH 4 SCREWS. THEN LOCATE POINTS SHOWN ON PHOTO BELOW, AND SOLDER CABLE LEADS ACCORDING WITH ITS NUMBER OR COLOUR:

