


SMART FORTWO DASH

BEFORE WORK IN THIS CAR, DISCONNECT BATTERY FROM CAR.

CONNECT AFTER MOUNTED.

ENIGMA

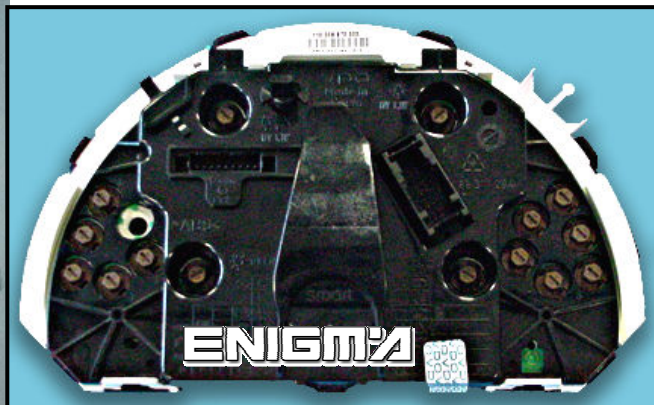

USE CABLE C4, OPEN DASH COMPLETELY, MAKE IT CAREFULLY,

WE DON'T NEED TO REMOVE NAIL, SCREEN MUST BE CONNECTED TO BOARD, THEN LOCATE EPROM MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

