



SUZUKI BANDIT

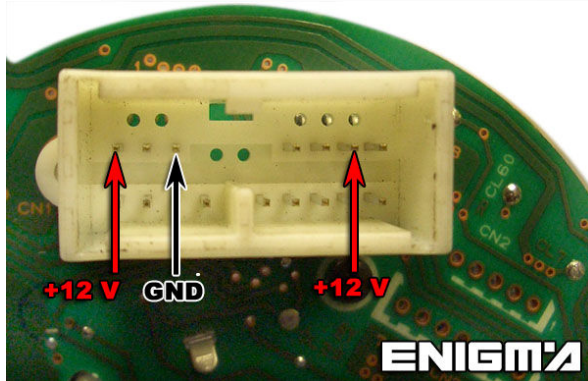

USE CABLE C4, REMOVE OUTSIDE COVERS, CAREFULLY, THEN LOCATE RL56 EEPROM, AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

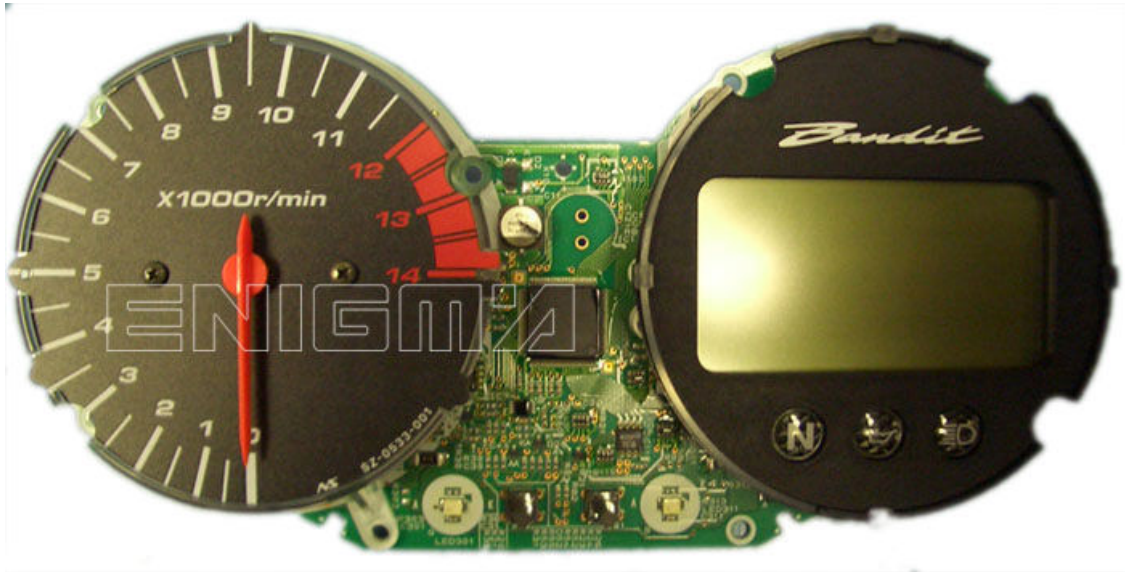