
TOYOTA AVENSIS DENSO



METHOD 1:

Use cable ${\it C11}$, solder or connect cable leads as photos below show to us:

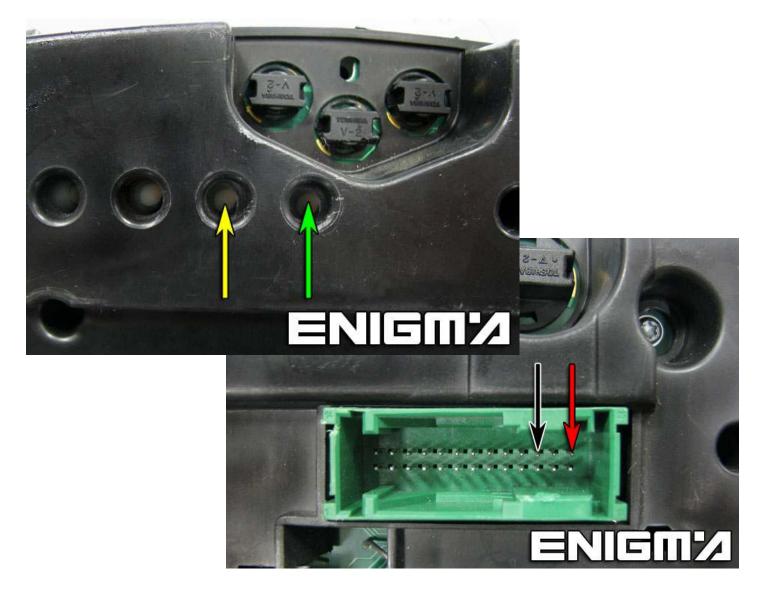

METHOD 2:

USE CABLE C4, OPEN ALL DASH, REMOVE NAILS CAREFULLY, THEN LOCATE EPROM 93C56 MEMORY, AND CLIP IT CHECKING PIN 1 AS PHOTO BELOW SHOWS TO US:

