


TOYOTA AVENSIS FROM 2003

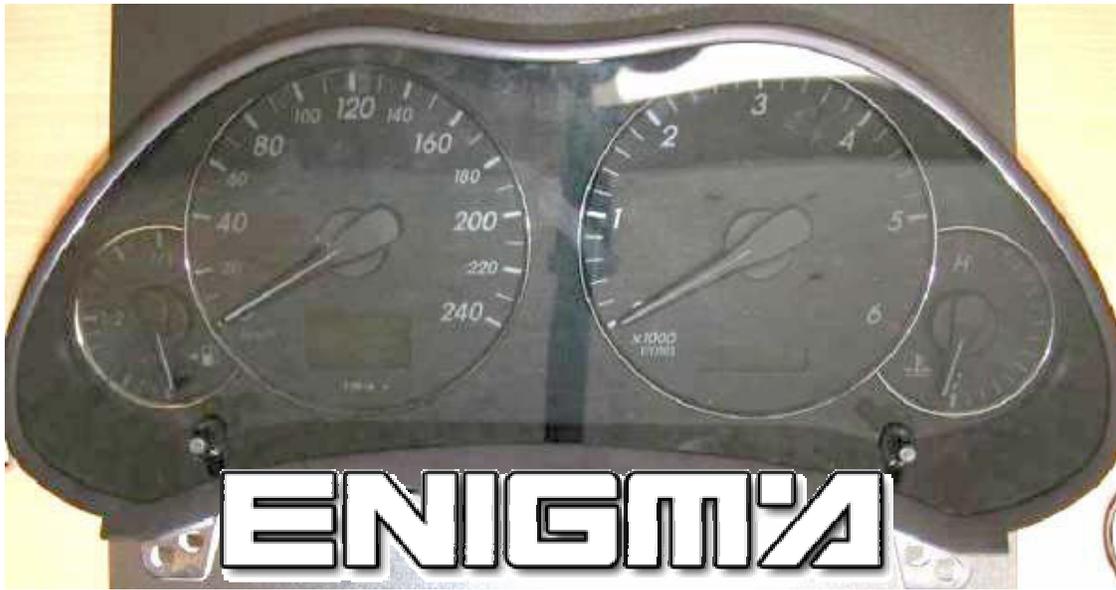

USE CABLE C4, OPEN BACK COVER FROM DASH, CAREFULLY, THEN LOCATE EPROM MEMORY, AND CLIP IT CHECKING **PIN 1** AS WE CAN SEE ON THE PHOTO BELOW:

