
TOYOTA AVENSIS TO 2003



METHOD 1:

Using cable $\emph{C}11$, we have to connect or solder cable leads as below

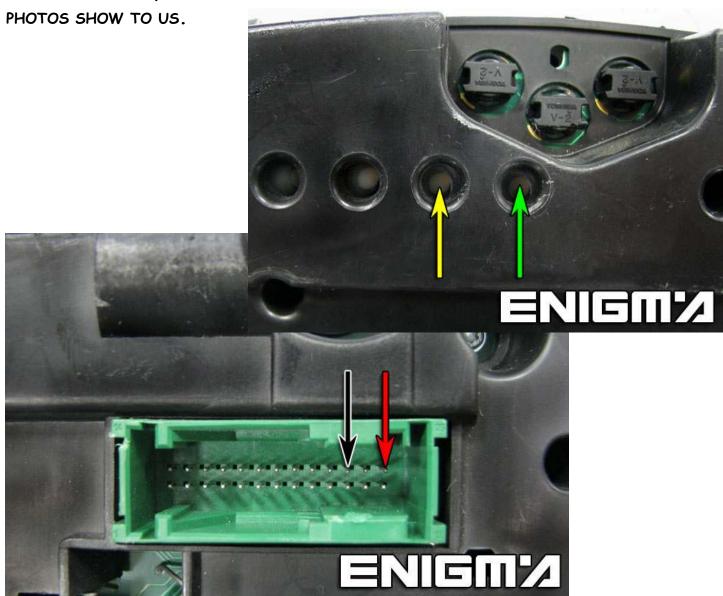

METHOD 2:

USE CABLE C4, OPEN ALL DASH, REMOVE NAILS CAREFULLY, THEN LOCATE EPROM 93C56 MEMORY, AND CLIP IT CHECKING PIN 1 AS SHOWN OF BELOW PHOTO:

