


TOYOTA COROLLA FROM 2003



METHOD 1:

CONNECT SPECIFIC C15 CABLE LEADS AS BELOW PHOTOS SHOW TO US:

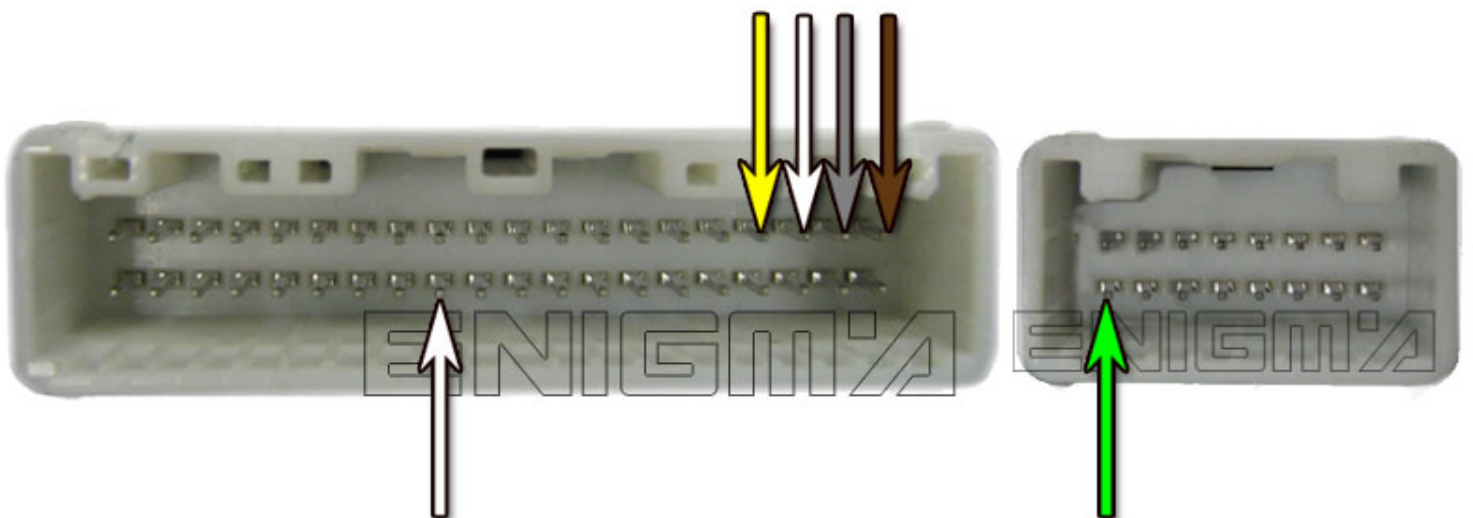

METHOD 2:

USE CABLE C4, OPEN ALL DASH, PLEASE MAKE IT CAREFULLY, FIRST REMOVE OUTSIDE COVERS, THEN NAILS, AND NOW BACK STICKER, THIS MUST BE VERY CAREFULLY, IT IS VERY DIFFICULT; LATER WHITE PLASTIC CHASSIS, NOW WE HAVE MAIN BOARD IN OUR HANDS AND WE CAN LOCATE EPROM, JUST CLIP IT CHECKING **PIN 1** AS SHOWN ON PHOTO BELOW:

