


VOLVO S40-V40



USE C7 CABLE, REMOVE ALL PLASTIC COVERS, NOW WE HAVE ONLY MAIN BOARD WITH NAILS AND ENGINES; WITH THESE METHODS YOU DON'T NEED TO TOUCH EITHER SCREENS OR NAILS. LOCATE POINTS ON THE BACK SIDE OF THE BOARD LIKE PHOTOS BELOW AND SOLDER CABLE LEADS AS THEY SHOW TO US:

VERSION 1:

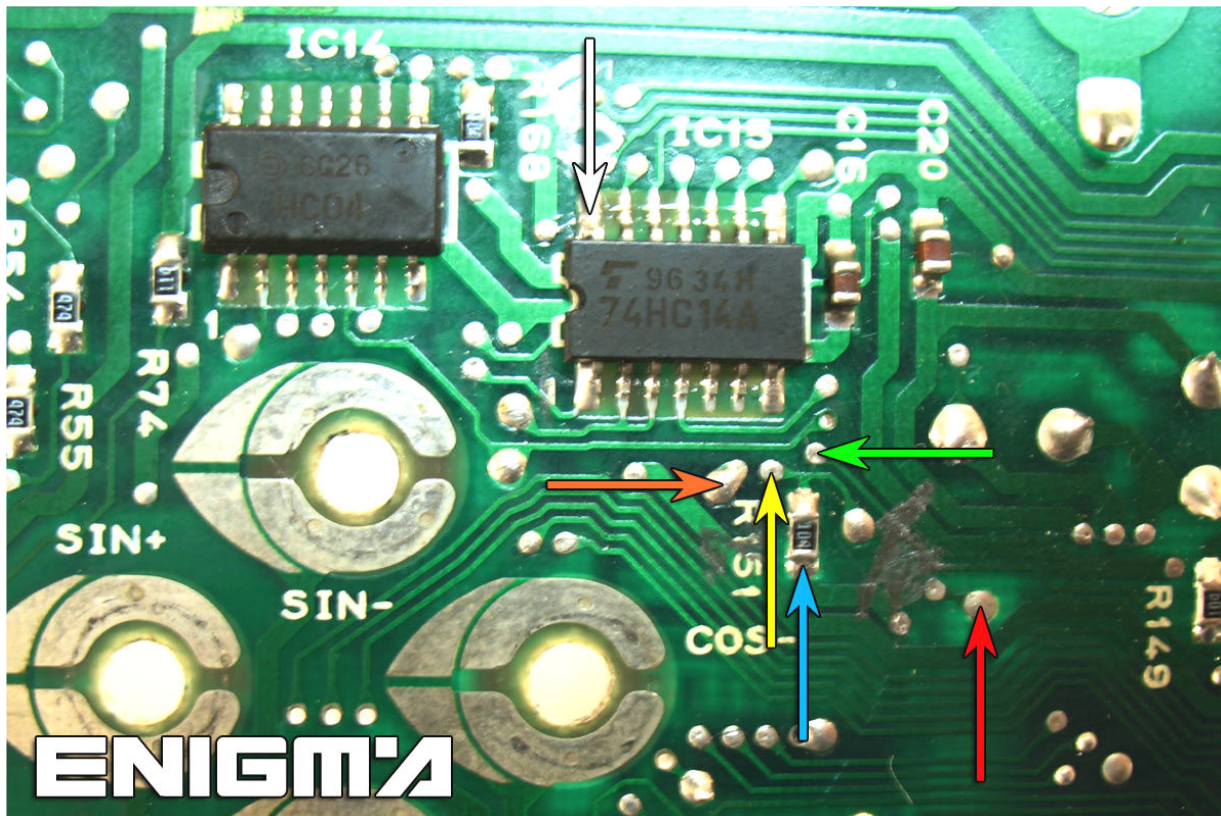

VERSION 2:

