


VOLVO S40-V40 FROM 2005



USE C12 CABLE, REMOVE DASH FROM CAR AND OPEN IT COMPLETELY. LOCATE POINTS IN THE MAIN BOARD LIKE IN THE PHOTOS AND SOLDER CABLE LEADS AS IT SHOWS TO US:

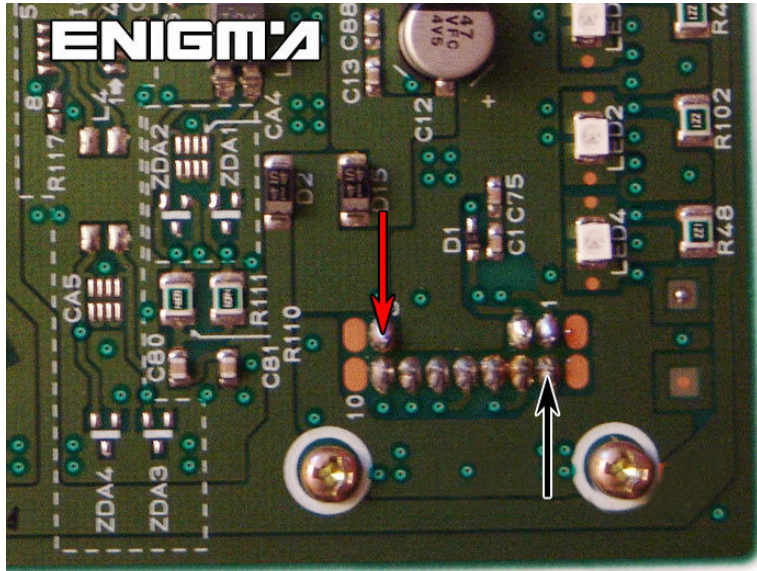