



VOLVO S80 HC08



USE C12 CABLE, REMOVE DASH FROM CAR, NEXT CAREFULLY OPEN DASH. AFTER OPEN IT, REMOVE METAL COVER OVER MOTOROLA MCU FROM INSIDE. NOW WE HAVE MAIN BOARD FREE, **LIFT UP PIN NR96** AND MAKE A BRIDGE WITH POINT FROM R62, THEN SOLDER WHITE AND GREEN CABLE AS ON PHOTOS SHOWN BELOW:

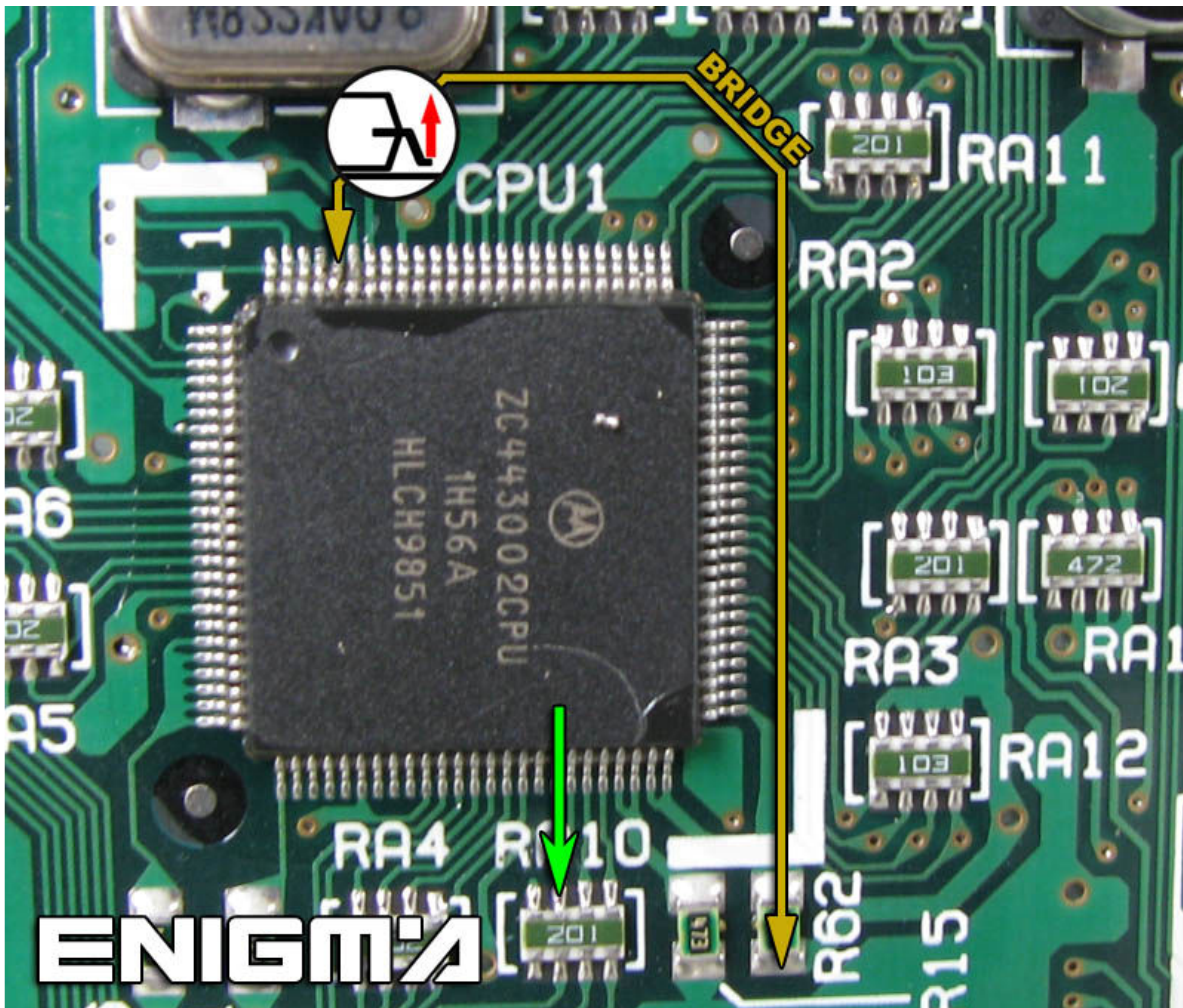

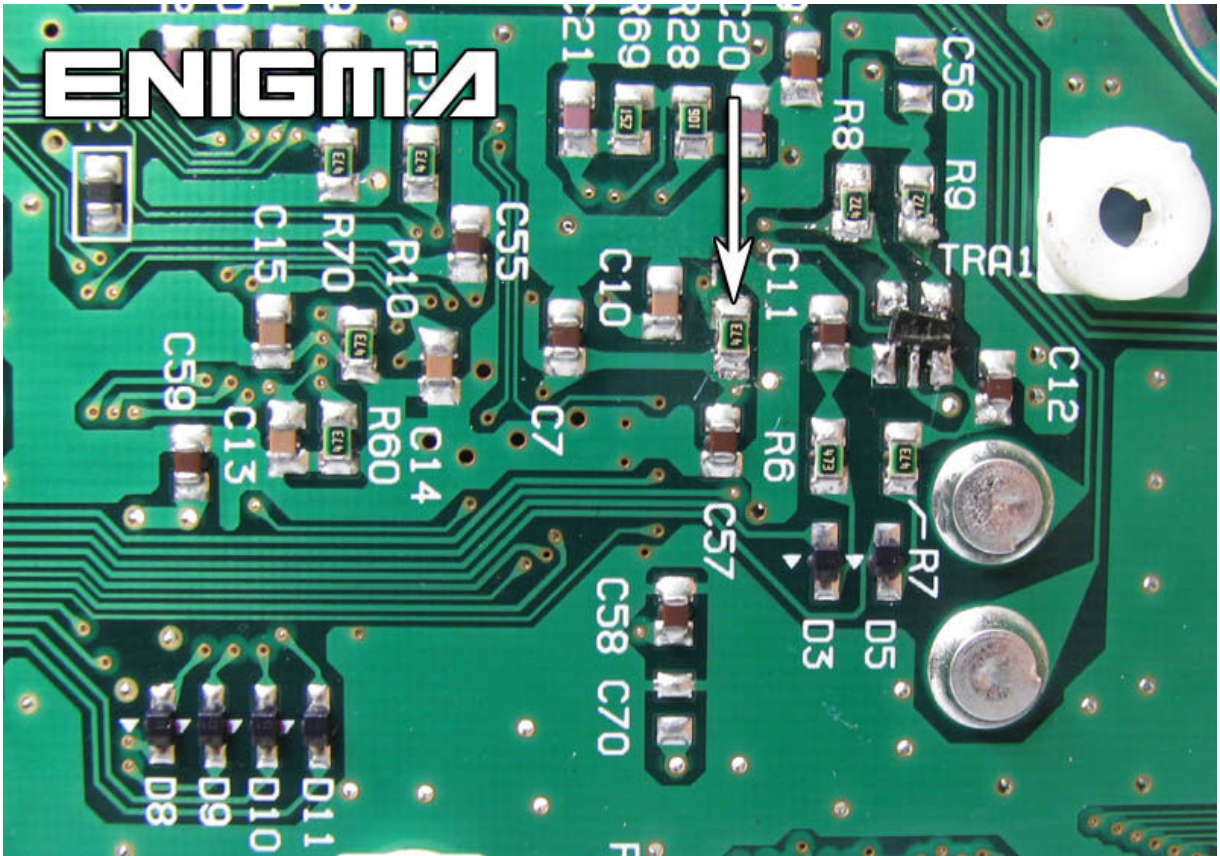

THEN CONNECT GROUND AND POSITIVE CABLE (BLACK AND RED) LIKE WE CAN SEE ON NEXT PHOTO:

