


VW GOLF3 VDO TORX



USE THIS METHOD ON VW GOLF3 VDO DASHBOARDS WITH TORX SCREWS:

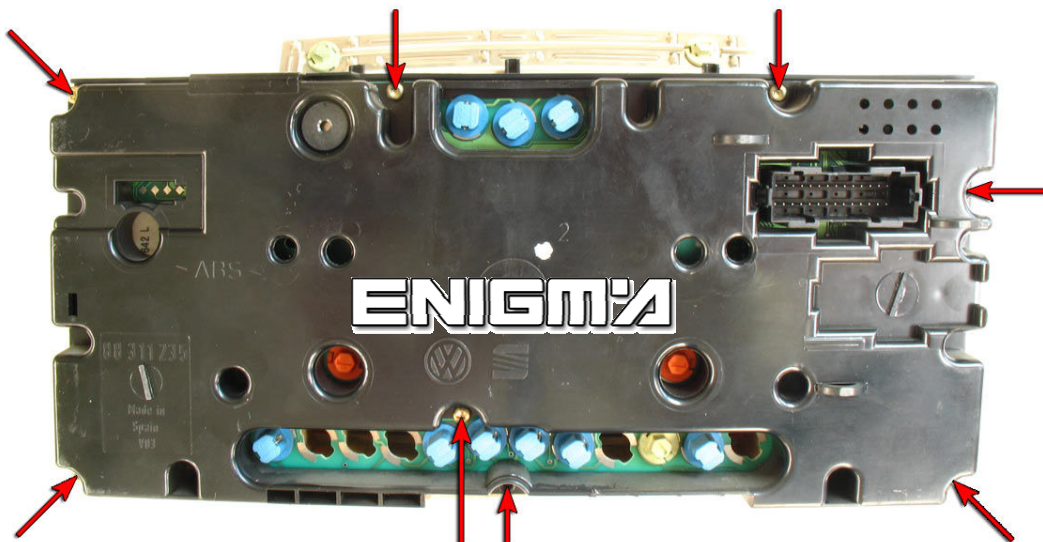

USE CABLE C5, REMOVE BACK PLASTIC COVER FROM DASH USING TORX SCREW, PLEASE MAKE IT CAREFULLY, THEN LOCATE EEPROM 93C46 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

