


# VW POLO4 TRW

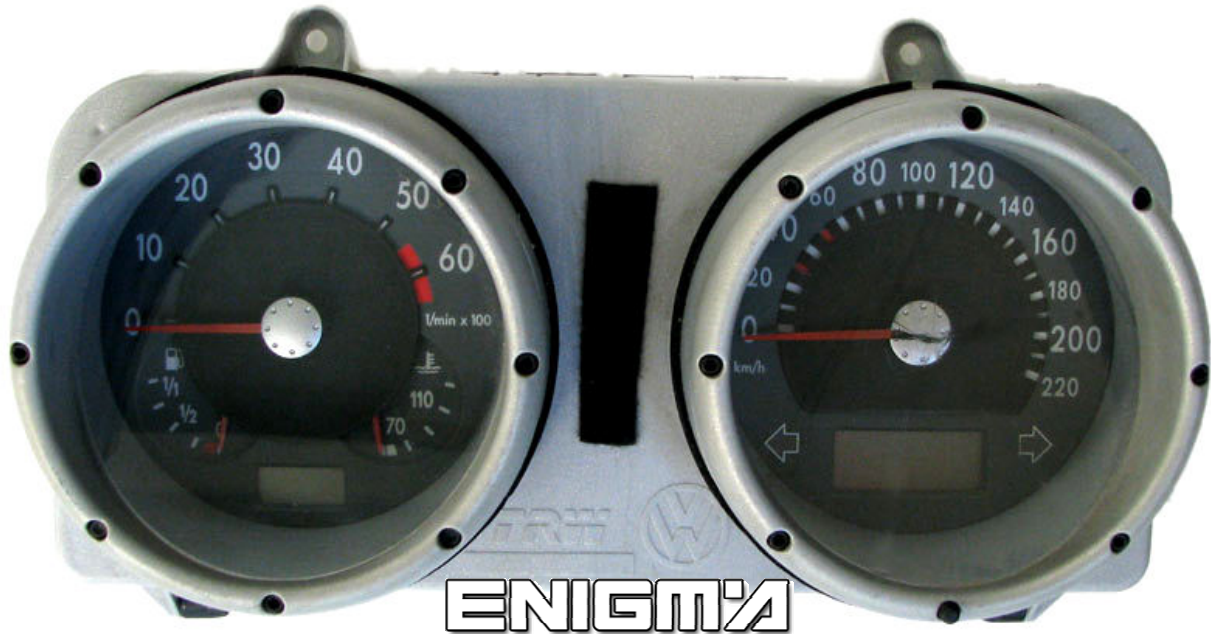

USE CABLE C4, OPEN DASH, PLEASE MAKE IT CAREFULLY, THEN LOCATE EEPROM 24C04 MEMORY AND CLIP IT CHECKING PIN 1 AS SHOWN OF PHOTO BELOW:

