


YAMAHA FAZER FROM 2005



MAKE A HOLE ON THE BACK PLASTIC COVER:

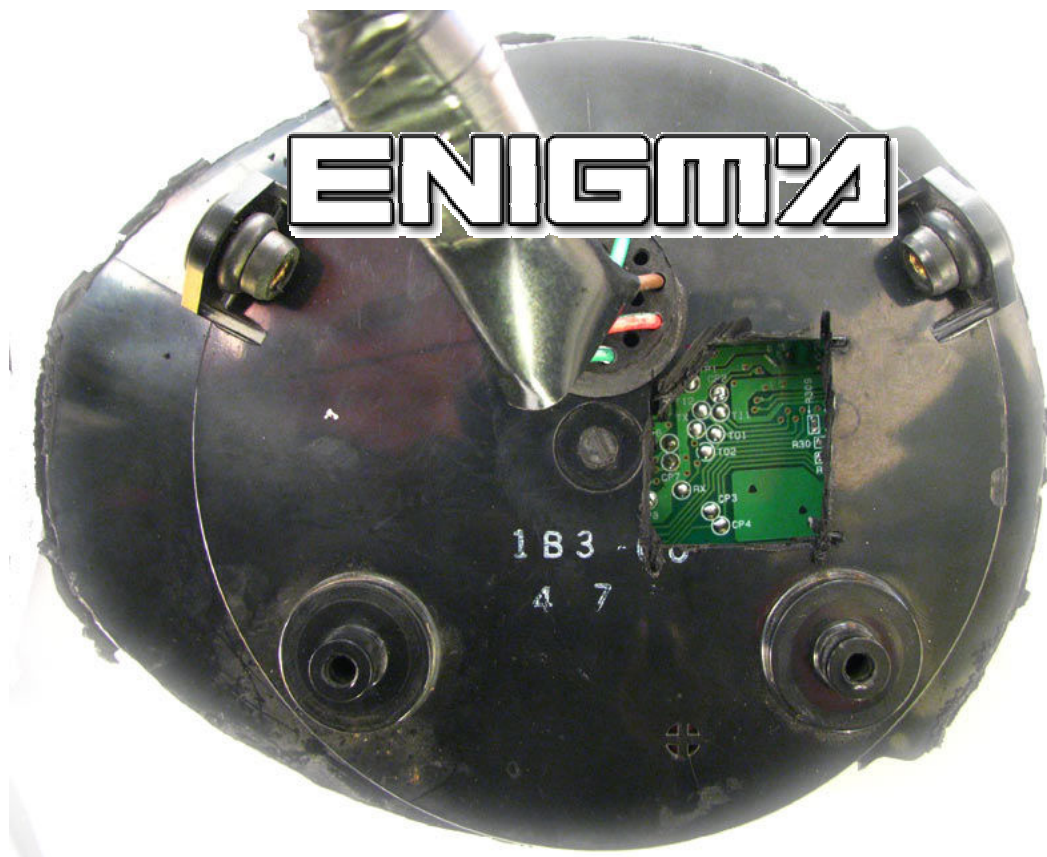

USE C7 CABLE, LOCATE POINTS IN THE MAIN BOARD LIKE IN PHOTO BELOW AND SOLDER CABLE LEADS AS IT SHOWS TO US:

