



LANCIA Y TO 2005

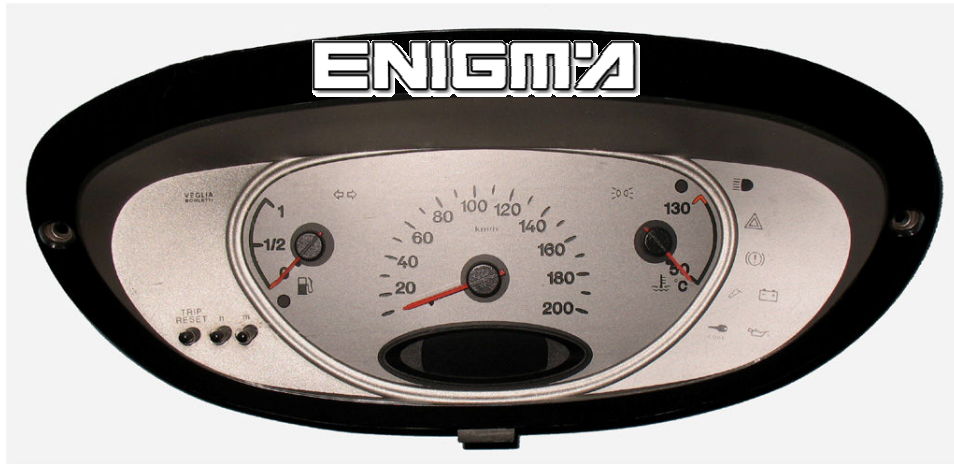

USE CABLE C11, REMOVE BACK SIDE FROM DASH, THEN CONNECT OR SOLDER CABLE LEADS ACCORDING TO COLOURS AS SHOWN OF BELOW PHOTO:

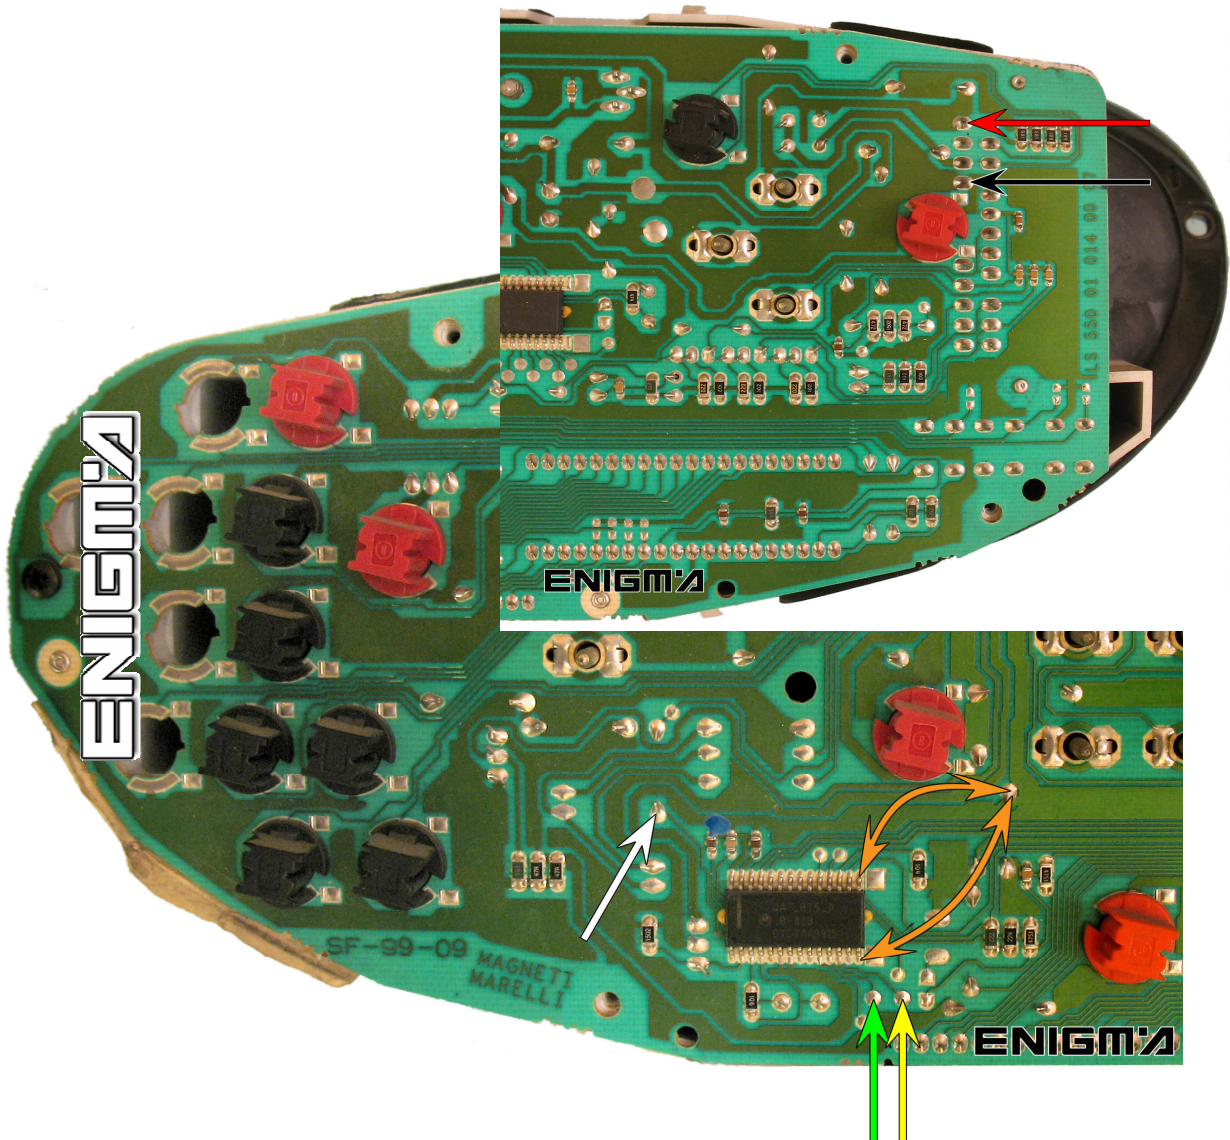

DON'T FORGET TO MAKE A BRIDGE BETWEEN THOSE 3 POINTS