


### S4.3 CarProg Daihatsu immobiliser manual

Model	Year	Transponder type
CHARADE		TEX
COPEN		TEX
CUORE		TEX
FEROZA		TEX
MOVE		TEX
SIRION		TEX
TERIOS		TEX
YRV		TEX

**S4.3.1** Daihatsu immobiliser system with separated immo box and Texas transponder (4C by Silca). Immobiliser box are located near to ignition key. Usually this is black or brown box marked "immobilizer" or "134.2 kHz".

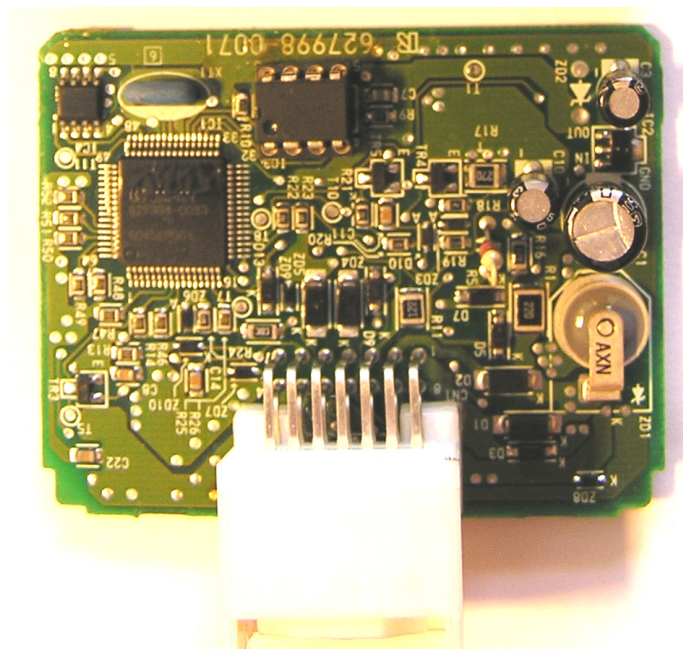

Remove immobiliser ECU from the car and open it. Find 93C66 EEPROM in DIP package. Use **A5** or **A4** adapter and follow CarProg instruction to program transponder key. **Short quartz resonator for in-circuit EEPROM programming or remove 93C66 from immobiliser board.**